



PROGRAMMING OF RTS TRANSMITTERS

brought to you by:
somfy.

0861-1-TAYLOR (529567)
www.taylorblinds.co.za

TAYLOR
BLINDS & SHUTTERS Est.1959

0861-1-TAYLOR (529567)
www.taylorblinds.co.za

TAYLOR
BLINDS & SHUTTERS Est.1959

PROGRAMMING MODE

BEFORE YOU BEGIN

Motors are shipped without limit settings and transmitter ID's.

Steps 1 to 7 must be completed to ensure proper shade programming and functionality.

It is recommended to power only the motor being programmed (disconnect power to all the other motors) Motor will exit programming mode after 2 minutes of inactivity.

STEP 1: CONNECT POWER

With the motor installed in shade connect power to the motor (220V, or 12V or 24V transformer or 12V battery wand)



STEP 2: INITIATE PROGRAMMING

Press both  and  **at the same time** until the motor jogs. **A jog is a brief up and down motion.**

In programming mode the motor operates in momentary fashion.

STEP 3: CHECK DIRECTIONS

Press  or 

When pressing  product should go down or out. To change direction press and hold  (stop) until the motor jogs (shade has a short up and down movement)

STEP 4: SET THE LIMITS

Bring the motor to desired **upper** limit. Press both  (stop) and  until the motor moves, then release. (If the motor stops when the buttons are released take it back to the upper limit and repeat) Stop motor when reaching the desired **lower** limit. You can adjust by pressing  or 

PROGRAMMING MODE

RTS TRANSMITTERS

STEP 5: SET THE LIMITS

Press both  (stop) and  **at the same time** until the motor moves, then release. The motor will stop at the original upper limit.

STEP 6: CONFIRM LIMIT SETTINGS

Press and hold  (stop) until the motor jogs to confirm the limit settings.

STEP 7: SET USER MODE

Press and hold the programming button on the back of the transmitter until the motor jogs. It will now operate in a maintained fashion (user mode). Double check limit settings as a precaution.



ADJUSTING THE LIMITS IN USER MODE

RTS TRANSMITTERS

TO CHANGE THE LOWER LIMIT:

STEP 1: Send the window covering to it's current lower limit.

STEP 2: Press both up (▲) and down (▼) at the same time until the window covering jogs. Adjust to a new lower limit position.

STEP 3: Press (Ⓜ) (stop) until the window covering jogs.



TO CHANGE THE UPPER LIMIT:

STEP 1: Send the window covering to it's current upper limit.

STEP 2: Press both up (▲) and down (▼) at the same time until the window covering jogs. Adjust to a new upper limit position.

STEP 3: Press (Ⓜ) (stop) until the window covering jogs.

FAVORITE (PREFERRED) MY POSITION

RTS TRANSMITTERS

INCREASED FUNCTIONALITY

Program a favorite position that is accessed frequently.



My Button:
“favourite position”

SETTING AN INTERMEDIATE POSITION

SETTING

Send the shade and stop it at the desired intermediate position by pressing (Ⓜ) (stop). Once the desired intermediate position is reached, Press and hold (Ⓜ) (stop) until the shade jogs. The intermediate position is now added to memory.

USING

Send the shade to the intermediate position by pressing (Ⓜ) (stop) from ANY shade position... **Note:** Shade be stationary prior to the activating intermediate position function.

NOTE

If shade is actively moving (in-motion) (Ⓜ) Should be pressed twice. **To delete:** Activate shade to intermediate position, then press and hold (Ⓜ) (stop) for 5 seconds. Shade will jog to confirm deletion.

QUICK PROGRAMMING GUIDE

RTS TRANSMITTERS MOTORS

ADDING OR DELETING A TRANSMITTER OR A CHANNEL



STEP 1: Using already programmed transmitters select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter.

STEP 2: Press and hold the programming button of that transmitter until the motor jogs.

STEP 3: Select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter, to be added or deleted.

STEP 4: Press and hold the programming button of that transmitter until the motor jogs.

PERFORM A DUAL POWER CUT

TO DELETE ALL PREVIOUS SETTINGS



Remove plug from power for 2 seconds



Plug-in power cord for 10 seconds



Remove plug from power for 2 seconds



Plug-in power cord . Window covering will begin to move

When the window covering stops, press and hold the **Programming button** of any transmitter until the window covering jogs **twice**.

Do not release the programming button until the jogging is complete or you will have to start the dual power cut from the beginning.